


# Metrologic-5145 Eclipse USB (kbw)

Pag. 1/2




# Metrologic-5145 Eclipse USB (kbw)


1. Enter Program Mode

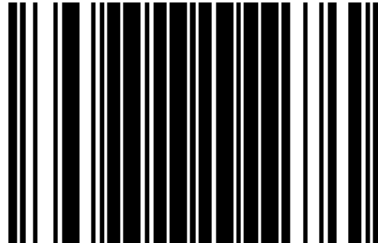


2. Internal Low Speed USB Defaults

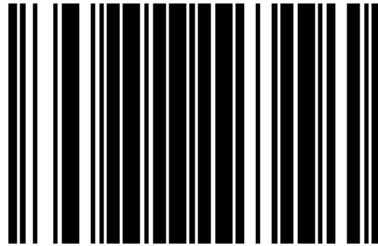


3. 8 Data Bits

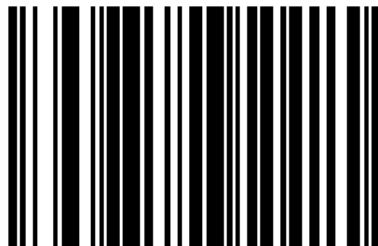

4. 1 Stop Bit

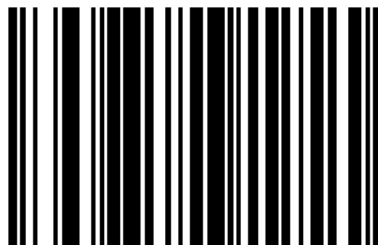


5. No Parity

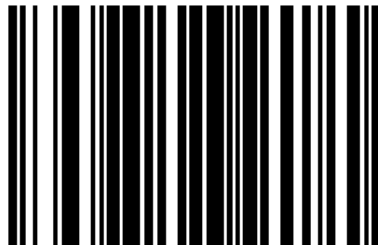


# Metrologic-5145 Eclipse USB (kbw)

Pag. 2/2


6. Disable Line Feed

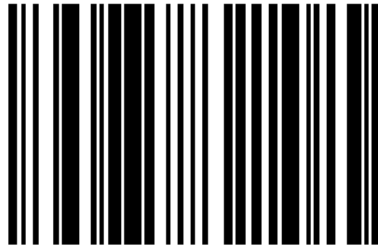

7. Enable Comm Timeout

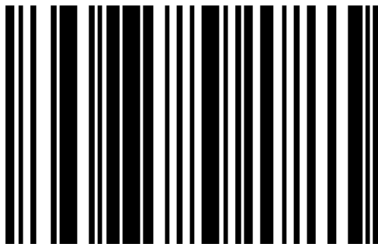

8. Beep After Transmit

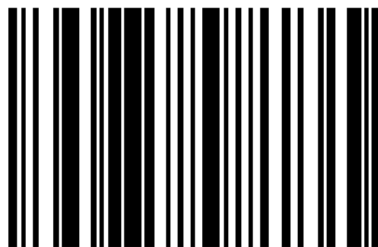

9. Exit Program Mode

