

Instellingenblad Socket S700 (760521)



Bluetooth®



GOED

SLECHT



SLECHT



Instellingenblad Socket S700 (760521)


Make sure the scanner is not connected to a host computer or device before scanning a command barcode!

Unpair sequence.

1. Power on the scanner.
2. Press and hold down the trigger button.
3. Press and hold down the power button.
4. After you hear 3 beeps, release both buttons.

*NOTE: You may have to “Forget” or “Delete” the pairing on your host device, as well.

By default, the scanner is in Basic Mode (HID) as a Keyboard device.

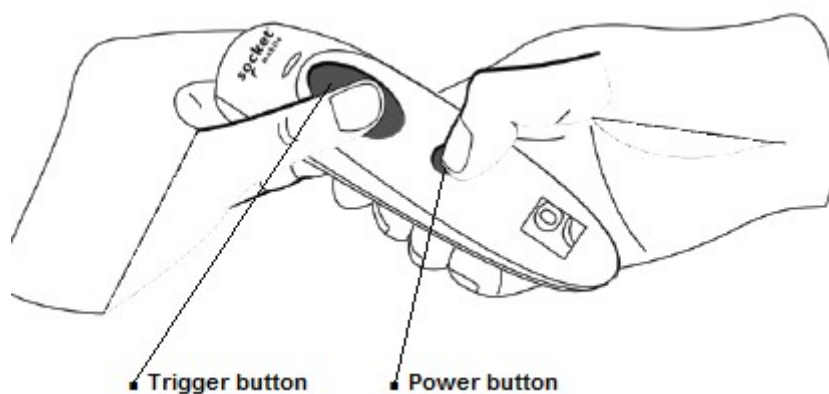

h

Instellingenblad Socket S700 (760521)

Factory Reset (all settings to default)



#FNB00F0#

Basic Mode (keyboard mode)



#FNB00F40001#

Suffix (carriage return)



#FNB00F50BC6048FFEE1680DE040000#

Scanner always on



#FNB012100000000#

Vibrate "Off"



#FNB013100010000#